



# Motorola Droid X2 Screen Replacement

Replacing the screen on your Motorola Droid X2.

Written By: Aaron Mak



## INTRODUCTION

This guide will show you how to replace the screen as your may be scratched or cracked. This process does require tools, a heat gun in particular. Be careful to not heat your screen for too long as it can damage the electronics.

---



### TOOLS:

- [T5 Torx Screwdriver](#) (1)
  - [iFixit Opening Tools](#) (1)
  - [Tweezers](#) (1)
  - [Heat Gun](#) (1)
-

## Step 1 — Battery



- Slide the plastic case off of the back of the phone, exposing the battery.

## Step 2



- Pull up on the red battery release tab and pull the battery out of the phone.

## Step 3 — Motherboard



- Remove the circled screws using a T-5 torques. These screws will be 4.3 millimeters in length.

⚠ Be careful to not strip any screws.


## Step 4



- Using a prying tool, snap off the front casing on the top and bottom of the phone.



## Step 5

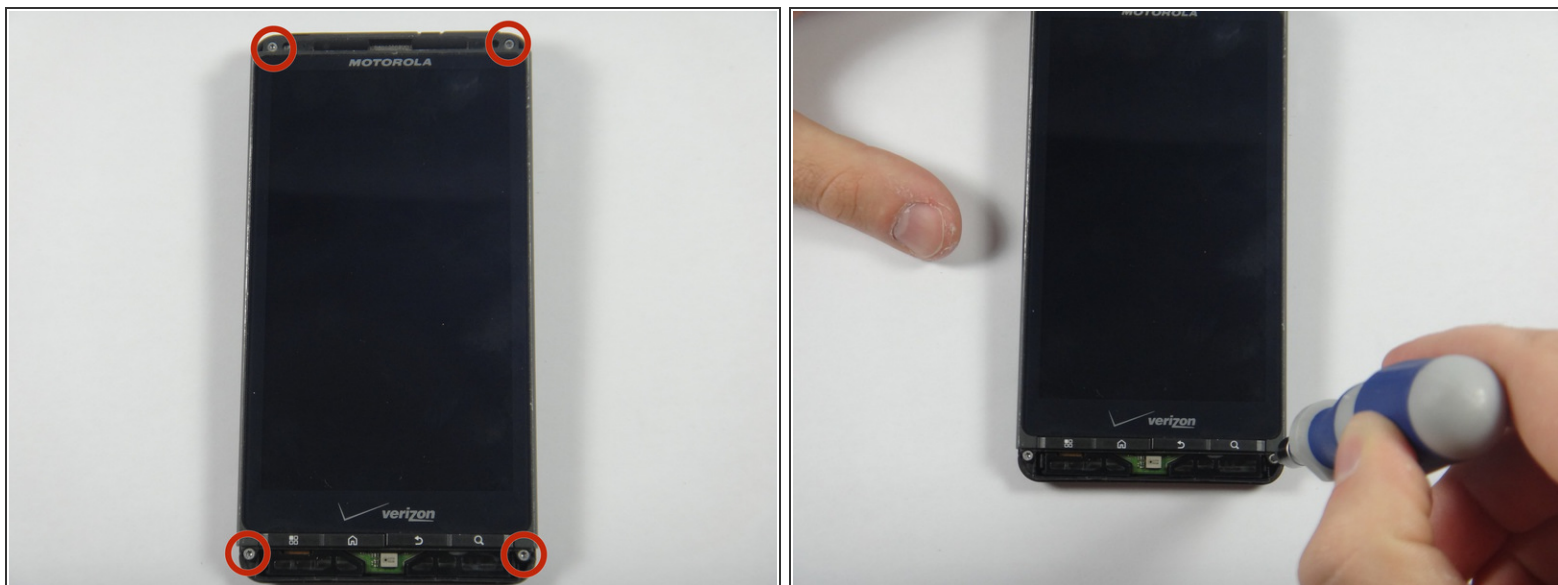


- Remove the circled screws using a T-5 torques.. These screws should be 5.8 millimeters in length.

## Step 6




- Using a plastic opening tool, snap open the phone. It should separate into a front piece with the hardware and a plastic backing.

## Step 7

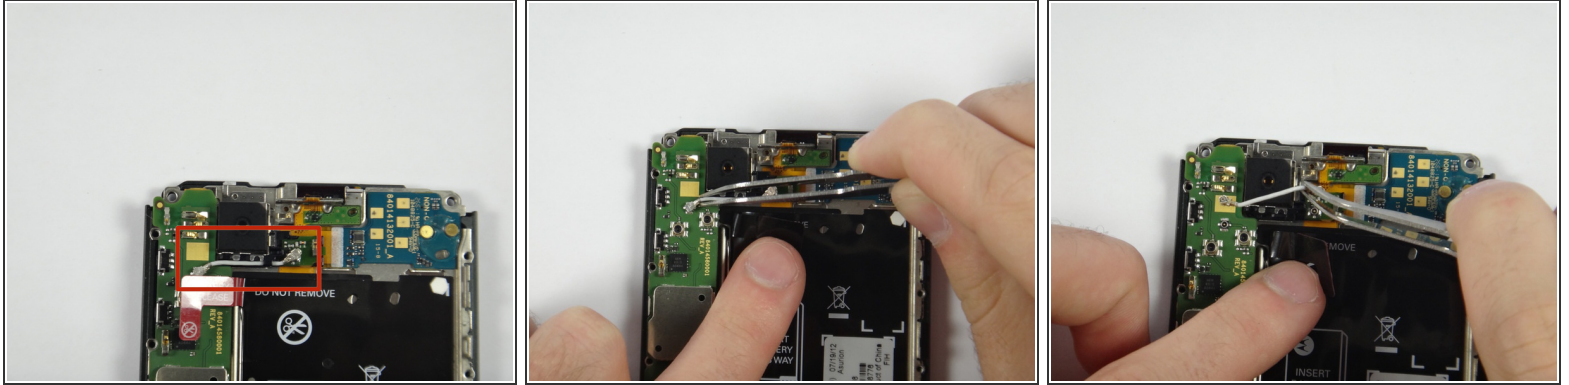

- Using tweezers, remove the white wire at the top of the phone near the camera.


## Step 8

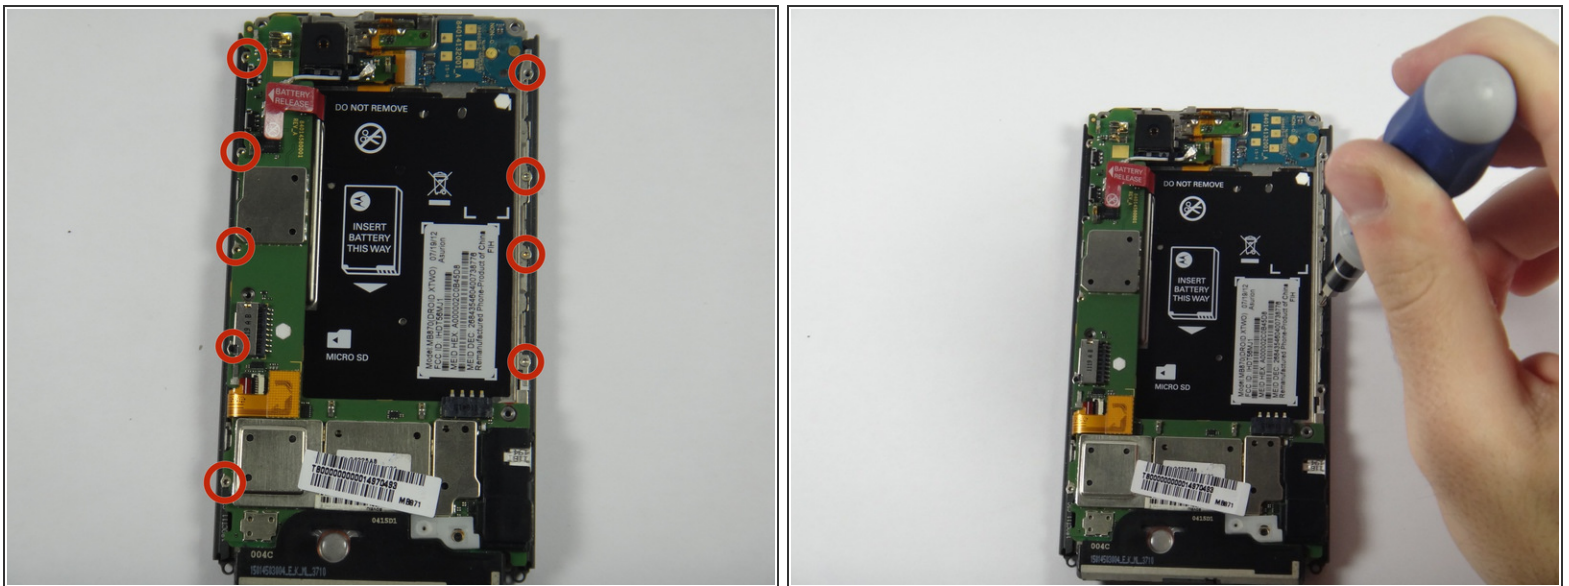

- Remove these nine screws using a T-5 torques. These screws should be 2.40 mm in length




## Step 9

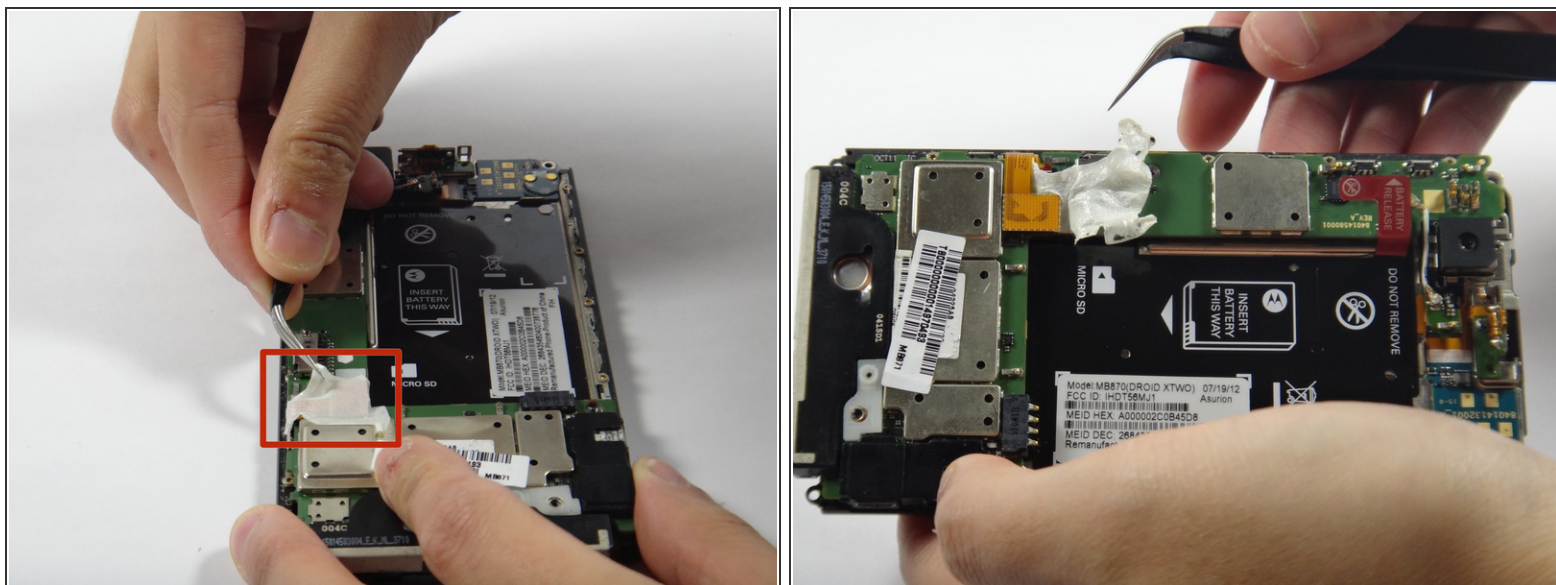


- Using tweezers, removed the white electrical tape on the motherboard.

## Step 10

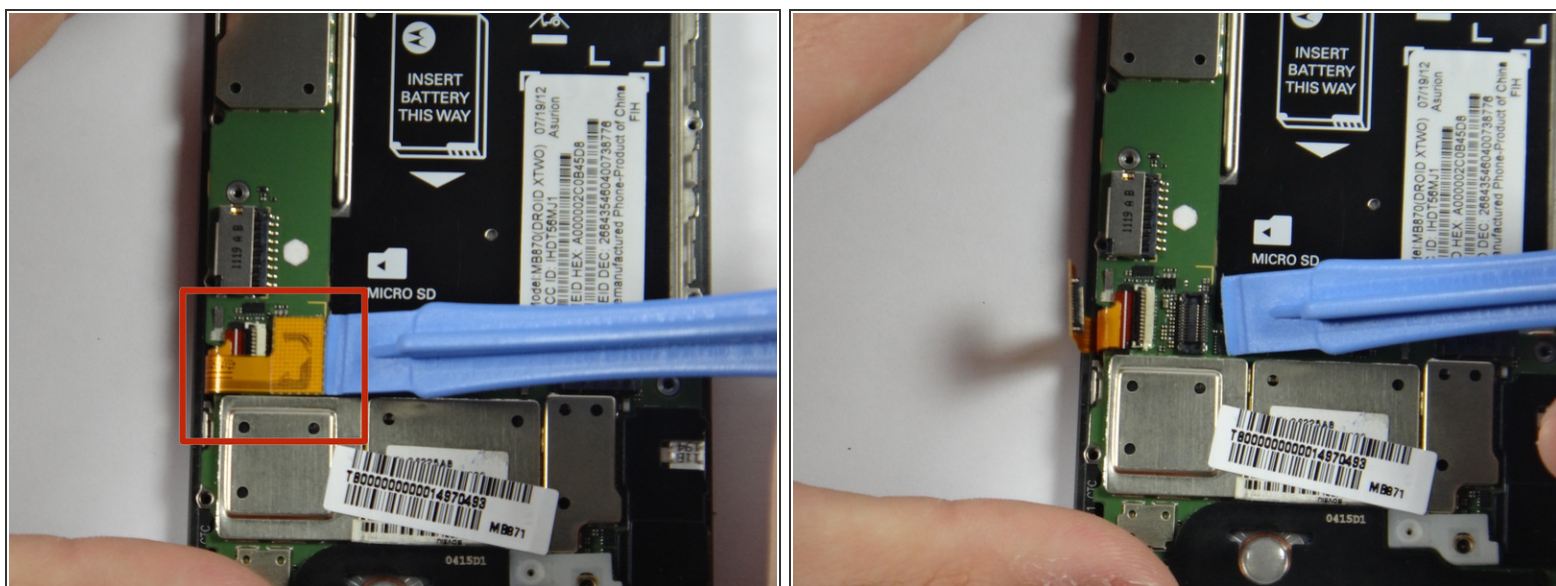



- Using the plastic opening tool, lift up to remove the connector.

## Step 11

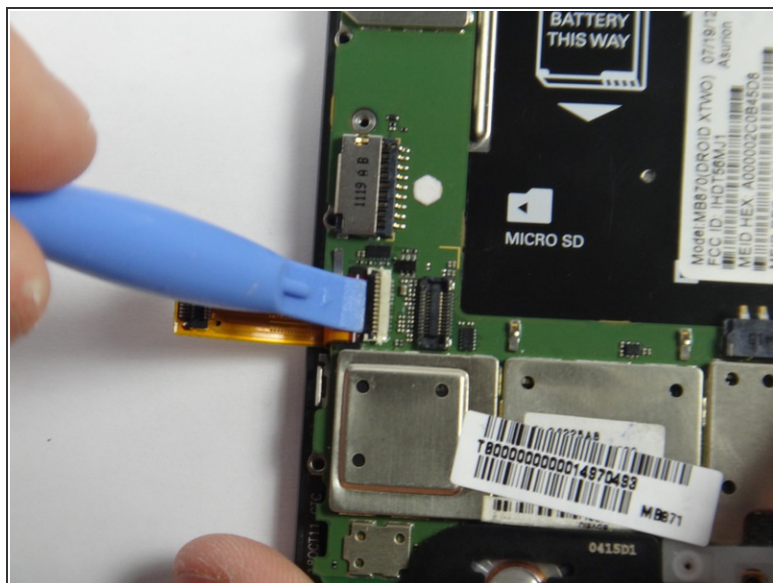

- Using a pry tool, lift the jawbone connector.


## Step 12

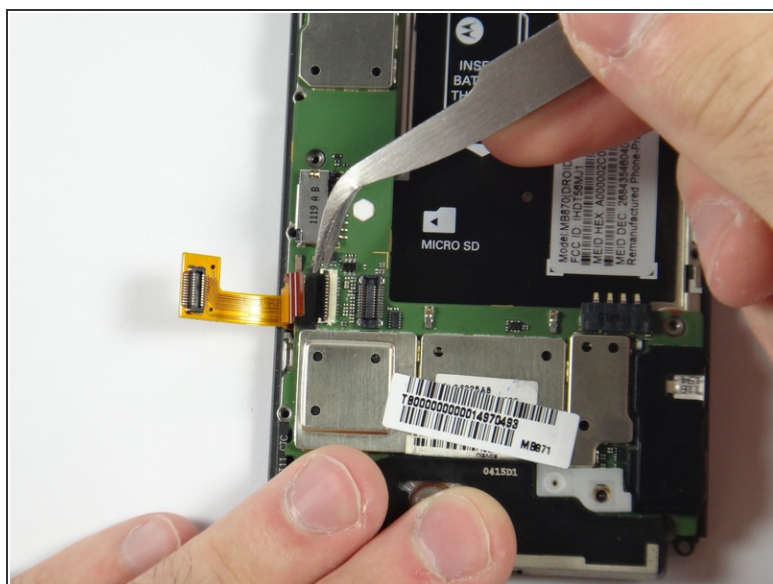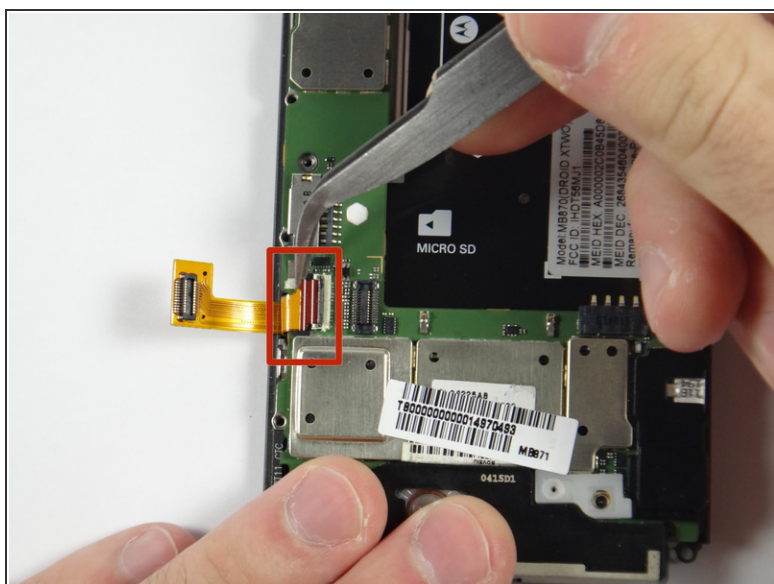

- Using tweezers, carefully disconnect the cable connector by pulling the cable out.




## Step 13

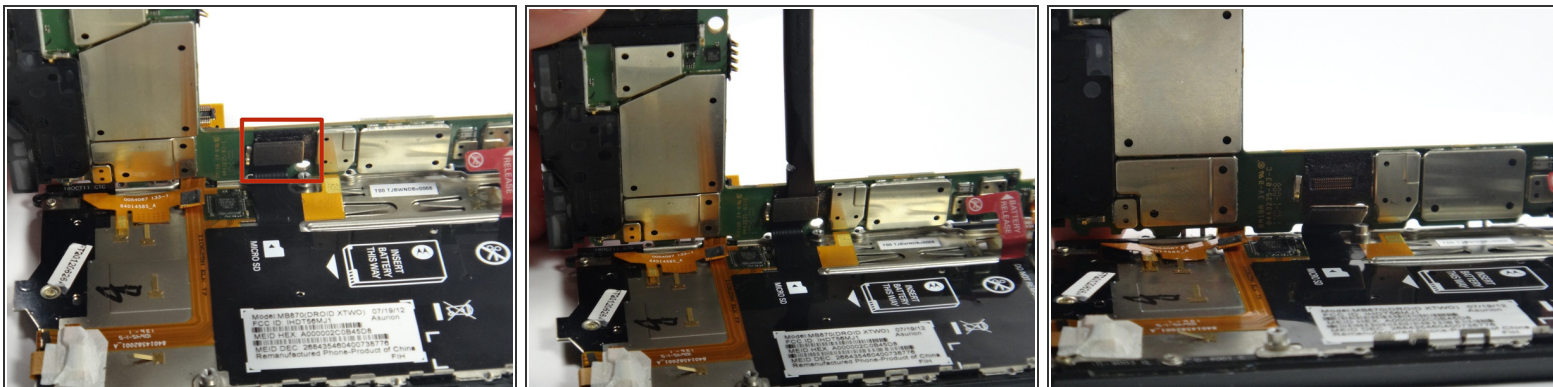


- Use a spudger to disconnect the cable connector.

## Step 14

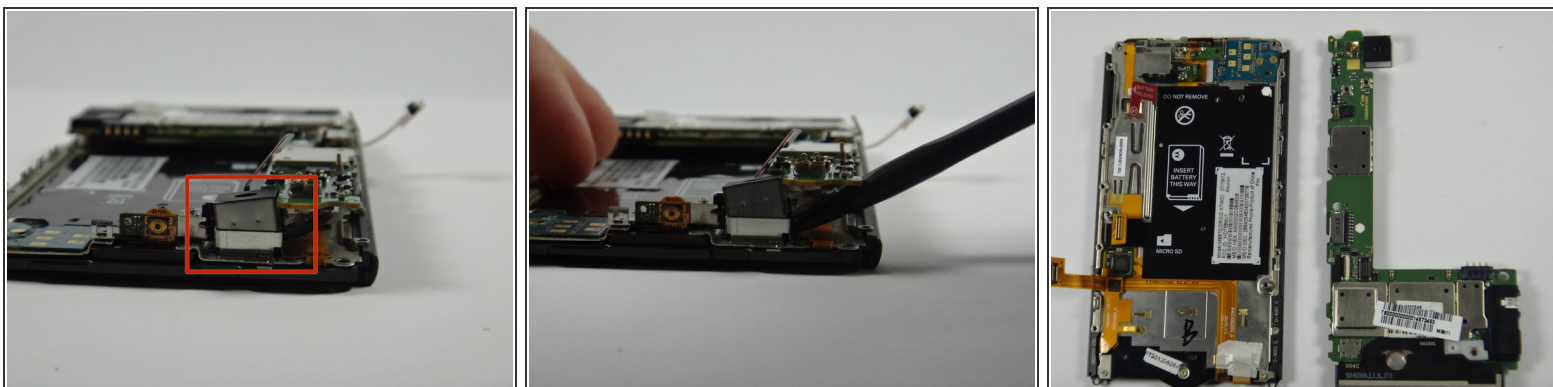

- Using a spudger, remove the camera. Lift up the motherboard and slide the spudger under the camera.




## Step 15 — Screen

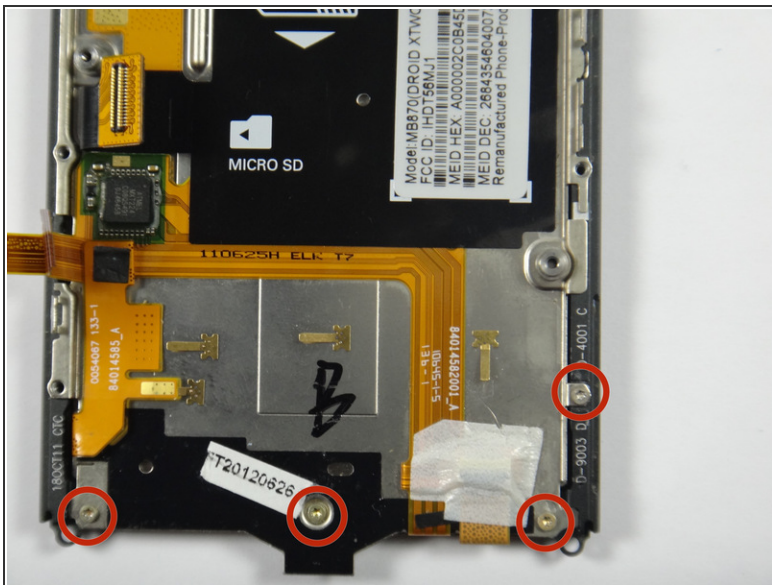

- Remove the 4 screws using a T-5 torques.. These screws are 2.40 mm in length.

⚠ Be careful to not strip the screws.


## Step 16

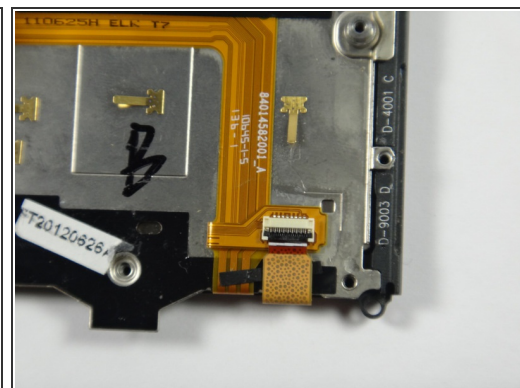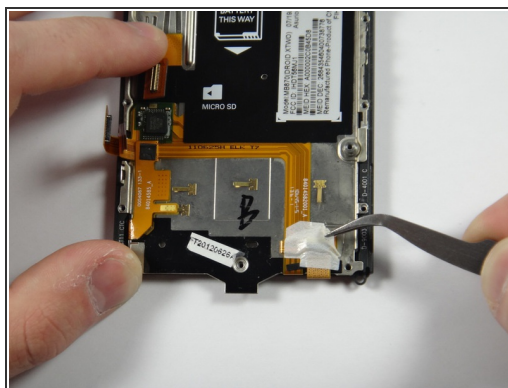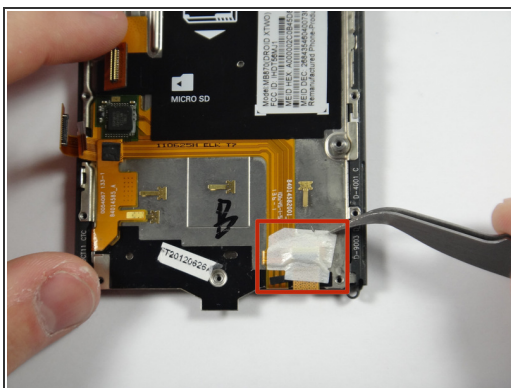

- Using tweezers, remove the white tape to reveal the connector




## Step 17

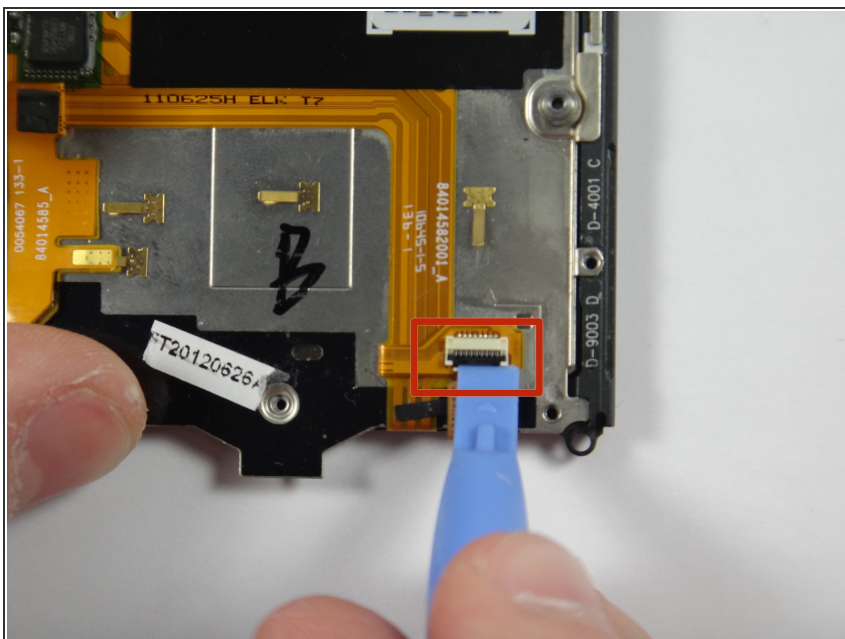

- Using the plastic opening tool, lift the jawbone connector.


## Step 18

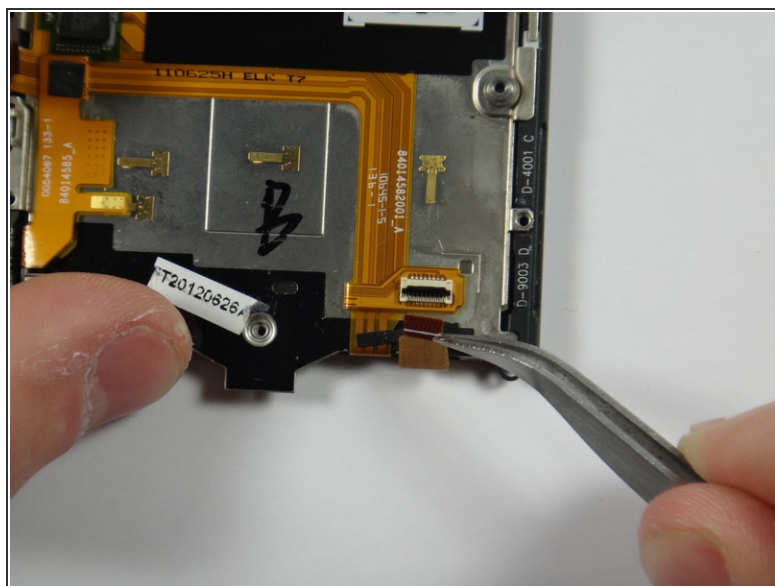

- Using tweezers, remove cable from the connector



## Step 19

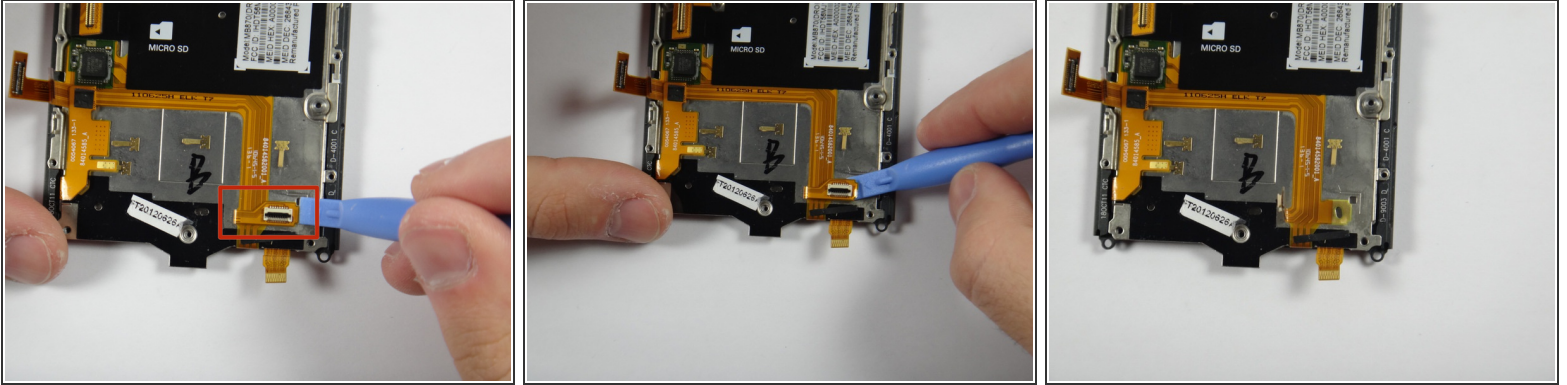


- Using a plastic opening tool, lift the connector from the device

## Step 20



- Lift the ribbon from the device

 This does require some effort to remove.

## Step 21



- Lift the screen off of the device

## Step 22




- Using a heat gun, gently heat the edges of the screen

⚠ Be careful as overheating can damage the electronics.

⚠ The screen will be hot after.

## Step 23

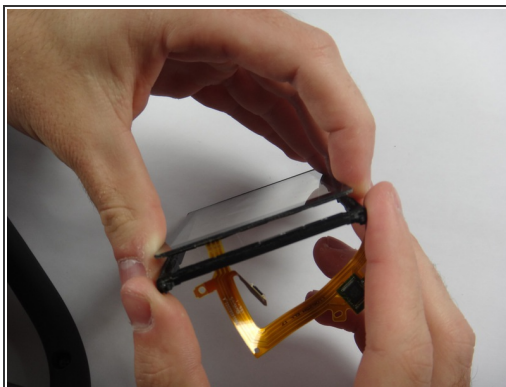

- Lift the screen from the frame.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-30 08:44:13 PM.